


## (b) Manual pulse generator is faulty

When you rotate the MPG, the following signal is output.  
Measure the signal with synchroscope at screw terminal on back of MPG. If no signal is output, measure +5V voltage.

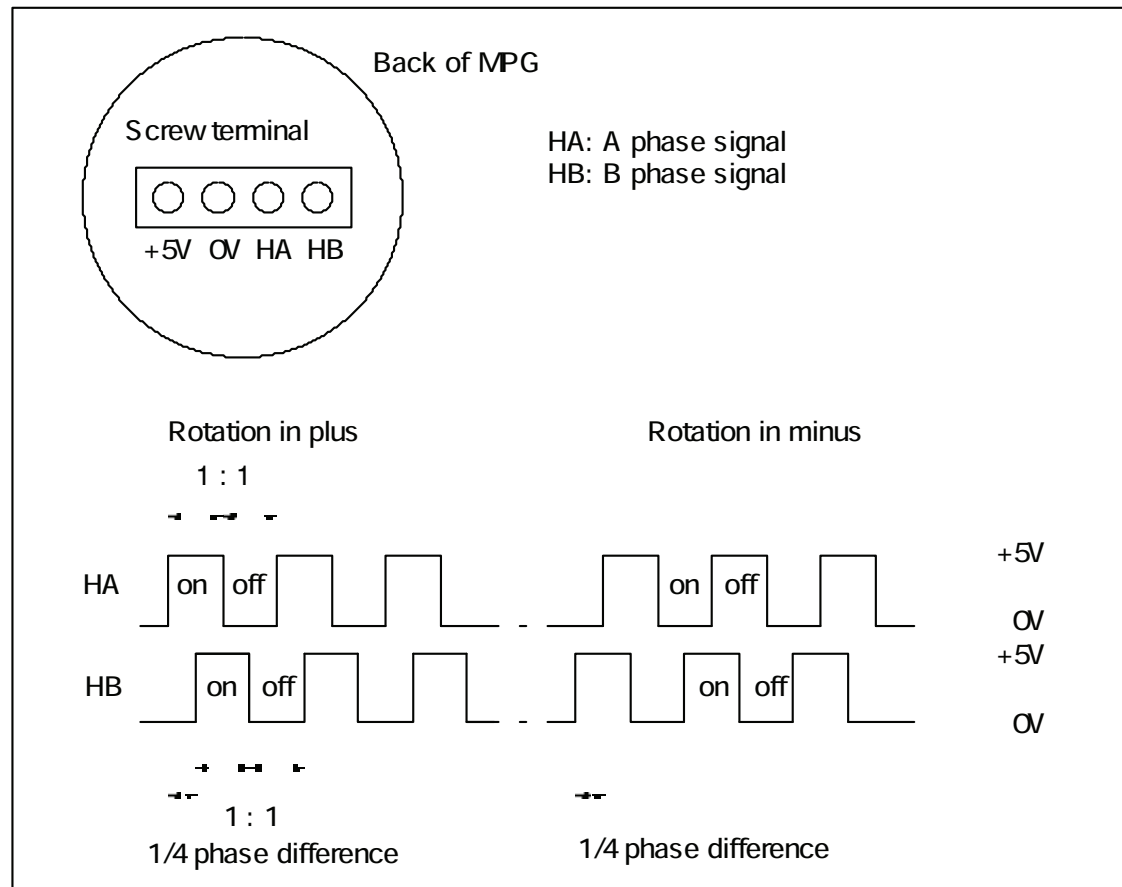

Check on and off ratio and phase difference of HA and HB.