


clearance adjust automatically, leave 0.1~ 0.2mm clearance between main nut and auxiliary nut

3. Lock setscrews of fixed auxiliary nut (properly lock)

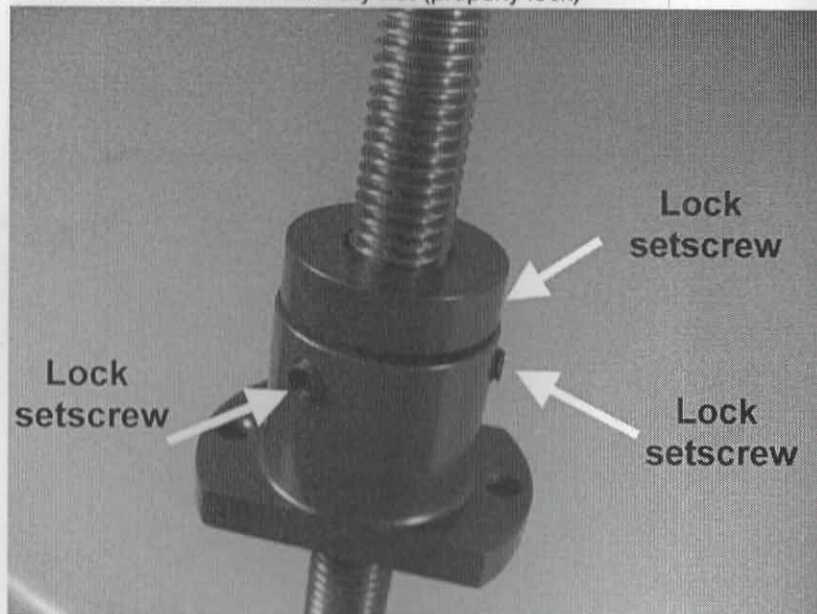

4. Spin the nut, if not move well repeat step1 and step 3.

Double Nuts on the 3 locations

X Axis

