


# A/C SOLID STATE RELAY BOARD WIRING GUIDE C8 REV2

Use the terminals to wire the connection as you would connect a regular switch. Keep in mind this only works for AC devices and do not require a small load to operate.

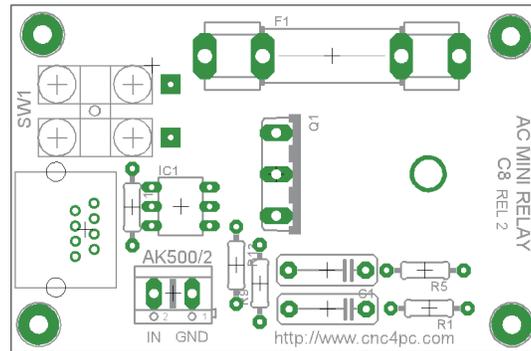

To use the Rj45 connector use the following pin assignment:  
Pin4=INPUT SIGNAL  
Pin8=GND

Use the optoisolated input to connect the input signals. These must signals must be at 3.3 or 5 vdc and require at least 10 milliamps of current.